



Series 800 Mighty Mouse UN Mating Thread Inline and Panel Mount Receptacles

800-010 and 800-011 Ordering Information



In-Line



Square Flange



Rear Panel Jam Nut

Integral Band Platform for direct attachment of a cable shield using a Band-Master™ ATS strap. Install a boot, or overmold onto the band platform. An accessory thread is available for attaching strain reliefs and backshells.

Three Shell Options: Jam nut with o-ring for rear panel mounting, square flange or in-line receptacle for free-hanging cables.

C

How To Order

Sample Part Number	800-011	-01	M	6-7	P	N
Series (See Table I)	800-010 = With Banding Platform 800-011 = With Accessory Thread					
Shell Style (See Table II)	-01 = In-Line -02 = Square Flange for Front or Rear Mounting -07 = Jam Nut for Rear Panel Mounting (See <i>Jam Nut Panel Cutout Dimensions Page C-3</i>)					
Shell Material and Finish	C = Aluminum / Black Anodize (Non-Conductive) RoHS Compliant M = Aluminum / Electroless Nickel RoHS Compliant NF = Aluminum / Cadmium with Olive Drab Chromate ZNU = Aluminum / Zinc-Nickel with Black Chromate MT = Aluminum / Nickel-PTFE RoHS Compliant Z1 = Stainless Steel / Passivated RoHS Compliant					
Shell Size - Insert Arrangement	See Contact Arrangements page C-2					
Contact Type	Connector supplied with crimp contacts P = Pin S = Socket Connectors with contacts are supplied with signal and/or power crimp contacts. These contacts are not installed. Coaxial contacts and non-standard signal contacts are ordered separately.		Connector supplied without contacts A = Pin Connector B = Socket Connector		Connector supplied with 30 AWG crimp contacts G = Pin H = Socket	
Shell Key Position (See Table III)	N = Normal X = Pos. X Y = Pos. Y Z = Pos. Z					

Table I: Series

800-010 Receptacle with Banding Platform	800-011 Receptacle with Accessory Thread

Table II: Shell Style

-01 In-Line	-02 Square Flange or Rear Mounting	-07 Jam Nut for Rear Panel Mounting

Dimensions in Inches (millimeters) are subject to change without notice.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Glenair:

[800-010-02NF6-7SN](#) [800-011-02M8-13SN](#) [800-010-02C6-7PN](#) [800-010-01C7-10SN](#) [800-010-01M12-37PN](#) [800-010-01M12-37SN](#) [800-010-01M6-4SN](#) [800-010-01M6-7PN](#) [800-010-01M6-7SN](#) [800-010-01M9-19PN](#) [800-010-01M9-19SN](#) [800-010-01NF6-4SN](#) [800-010-01Z16-7SN](#) [800-010-02M10-26PN](#) [800-010-02M12-37PN](#) [800-010-02M12-37SN](#) [800-010-02M5-3PN](#) [800-010-02M6-4PN](#) [800-010-02M6-4SN](#) [800-010-02M6-7PN](#) [800-010-02M6-7SN](#) [800-010-02M8-13PN](#) [800-010-02M9-19PN](#) [800-011-02NF6-4PN](#) [800-010-07M6-7PX](#) [800-010-07Z16-7PX](#) [800-011-07M6-7SN](#) [800-011-07Z17-10SX](#) [800-010-01M5-3SN](#) [800-010-01M5-3SZ](#) [800-010-07NF7-10SN](#) [800-010-07ZNU7-10SZ](#) [800-011-07C6-7SN](#) [800-011-07C7-10SN](#) [800-011-07NF12-3PN](#) [800-011-07NF7-10PN](#) [800-011-07NF7-10PX](#) [800-011-07NF7-10PZ](#) [800-010-02M9-19SN](#) [800-010-02Z16-4SN](#) [800-010-02Z16-7PN](#) [800-010-02Z16-7SN](#) [800-010-07M10-26SN](#) [800-010-07M12-37PN](#) [800-010-07M12-37SN](#) [800-010-07M5-3SN](#) [800-010-07M6-4PN](#) [800-010-07M6-4SN](#) [800-010-07M6-7PN](#) [800-010-07M6-7SN](#) [800-010-07M7-10PN](#) [800-010-07M7-10SN](#) [800-010-07M8-13SN](#) [800-010-07M9-19PN](#) [800-010-07M9-19SN](#) [800-010-07NF6-7PN](#) [800-010-07NF6-7SN](#) [800-010-07NF9-19SN](#) [800-010-07Z16-4PN](#) [800-010-07Z16-4SN](#) [800-010-07Z16-7PN](#) [800-011-01NF6-7SN](#) [800-011-01Z16-4PN](#) [800-011-02M10-26PN](#) [800-011-02M12-37PN](#) [800-011-02M12-37SN](#) [800-011-02M5-3PN](#) [800-011-02M6-4PN](#) [800-011-02M6-4SN](#) [800-011-02M6-7PN](#) [800-011-02M6-7SN](#) [800-011-02M9-19PN](#) [800-011-02M9-19SN](#) [800-011-02NF6-7SN](#) [800-011-02Z16-4PN](#) [800-011-07M10-26SN](#) [800-011-07M12-37PN](#) [800-011-07M12-37SN](#) [800-011-07M5-3SN](#) [800-011-07M6-4PN](#) [800-011-07M6-4SN](#) [800-011-07M6-7PN](#) [800-011-07M7-10PN](#) [800-011-07M7-10SN](#) [800-011-07M8-13PN](#) [800-011-07M9-19PN](#) [800-011-07M9-19SN](#) [800-011-07NF12-37SN](#) [800-011-07NF6-7SN](#) [800-011-07NF9-19PN](#) [800-010-01C7-10PN](#) [800-010-01M10-26PN](#) [800-010-01M10-26SN](#) [800-010-01M5-3PN](#) [800-010-01M6-4PN](#) [800-010-01M6-4SY](#) [800-010-01M6-4SZ](#) [800-010-01M7-10PN](#) [800-010-01M7-10SN](#) [800-010-01M8-13PN](#)