Three-phase monitoring relays CM-PVS CM-PVS.31, CM-PVS.41 and CM-PVS.81

The three-phase monitoring relays CM-PVS.x1 monitor the phase parameters phase sequence, phase failure as well as over- and undervoltage. All devices are available with two different terminal versions. You can choose between the proven screw connection technology (double-chamber cage connection terminals) and the completely tool-free Easy Connect Technology (push-in terminals).



Characteristics

- Monitoring of three-phase mains for phase sequence (can be switched off), phase failure, over- and undervoltage
- TRMS measuring principle
- Threshold values for over- and undervoltage are adjustable as absolute values
- Tripping delay T_v can be adjusted or switched off by means of a logarithmic scale (0 s; 0.1-30 s)
- ON-delayed or OFF-delayed tripping delay selectable
- Powered by the measuring circuit
- Precise adjustment by front-face operating controls
- Screw connection technology or Easy Connect Technology available
- Housing material for highest fire protection classification
- Tool-free mounting on DIN rail as well as demounting
- 2 c/o (SPDT) contacts
- 22.5 mm (0.89 in) width
- 3 LEDs for the indication of operational states

Approvals

chus UL 508, CAN/CSA C22.2 No.14 (CM-PVS.81 pending)

(II) GL

PG GOST

CB CB scheme pending

(m)CCC

RMRS ⊛

Marks

 ϵ CE

C-Tick (CM-PVS.81 pending)

Order data

Three-phase monitoring relays

Туре	Rated control supply voltage = measuring voltage	Connection technology	Order code
CM-PVS.31P	3 x 160-300 V AC	Push-in terminals	1SVR 740 794 R1300
CM-PVS.31S		Screw terminals	1SVR 730 794 R1300
CM-PVS.41P	3 x 300-500 V AC	Push-in terminals	1SVR 740 794 R3300
CM-PVS.41S		Screw terminals	1SVR 730 794 R3300
CM-PVS.81P	3 x 200-400 V AC	Push-in terminals	1SVR 740 794 R2300
CM-PVS.81S		Screw terminals	1SVR 730 794 R2300


Accessories

Туре	Description	Order code
ADP.01		1SVR 430 029 R0100
MAR.01	Marker label for devices without DIP switches	1SVR 366 017 R0100
COV.11	Sealable transparent cover	1SVR 730 005 R0100

Connection technology

Maintenance free Easy Connect Technology with push-in terminals

Type designation CM-xxS.yyP

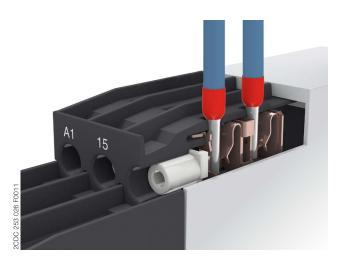


Push-in terminals

- Tool-free connection of rigid and flexible wires with wire end ferrule according to DIN 46228-1-A, DIN 46228-4-E
 - Wire size: 2 x 0.5-1.5 mm², (2 x 20 16 AWG)
- Easy connection of flexible wires without wire end ferrule by opening the terminals
- No retightening necessary
- One operation lever for opening both connection terminals
- For triggering the lever and disconnecting of wires you can use the same tool (Screwdriver according to DIN ISO 2380-1 Form A 0.8 x 4 mm (0.0315 x 0.157 in), DIN ISO 8764-1 PZ1 ø 4.5 mm (0.177 in))
- Constant spring force on terminal point independent of the applied wire type, wire size or ambient conditions (e. g. vibrations or temperature changes)
- Opening for testing the electrical contacting
- Gas-tight

Approved screw connection technology with double-chamber cage connection terminals

Type designation CM-xxS.yyS

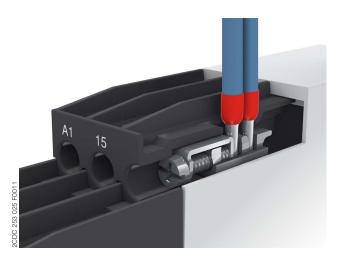


Double-chamber cage connection terminals

- Terminal spaces for different wire sizes: fine-strand with/without wire end ferrule: 1 x 0.5-2.5 mm² (2 x 20 14 AWG), 2 x 0.5-1.5 mm² (2 x 20 16 AWG) rigid:
 - $1 \times 0.5-4 \text{ mm}^2$ (1 x 20 12 AWG), $2 \times 0.5-2.5 \text{ mm}^2$ (2 x 20 14 AWG)
- One screw for opening and closing of both cages
- Pozidrive screws for pan- or crosshead screwdrivers according to DIN ISO 2380-1 Form A 0.8 x 4 mm (0.0315 x 0.157 in), DIN ISO 8764-1 PZ1 Ø 4.5 mm (0.177 in)

Both the Easy Connect Technology with push-in terminals and screw connection technology with double-chamber cage connection terminals have the same connection geometry as well as terminal position.

Functions

Operating controls

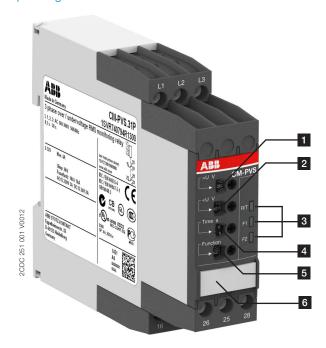

- 1 Adjustment of the hysteresis >U for overvoltage
- 2 Adjustment of the threshold value <U for undervoltage
- 3 Indication of operational states

R/T: red LED - Relay status / timing

F1: yellow LED - Fault message

F2: yellow LED - Fault message

- 4 Adjustment of the tripping delay T_v
- 5 Function selection (see rotary switch "Function")
- 6 Marker label

Application

The three-phase monitoring relays CM-PVS.x1 are designed for use in three-phase mains for monitoring the phase parameters phase sequence, phase failure as well as over- and undervoltage.

The CM-PVS.x1 provide an adjustable tripping delay and work according to the closed-circuit principle.

Operating mode

The CM-PVS.x1 have 2 c/o (SPDT) contacts and are available for 3-wire AC systems. The units are adjusted with front-face operating controls. The selection of ON-delay with phase sequence monitoring (ON-delay without phase sequence monitoring (OFF-delay without phase sequence monitoring (OFF

Potentiometers, with direct reading scale, allow the adjustment of the threshold values for overvoltage (>U), undervoltage (<U) and the tripping delay T_v . The tripping delay T_v is adjustable over a range of instantaneous to a 30 s delay. Timing is displayed by a flashing yellow LED labelled R/T.

Adjustment potentiometer

Threshold values

By means of three separate potentiometers with direct reading scales, the threshold values for over- and undervoltage as well as for phase unbalance can be adjusted within the measuring range.

	Measuring range for overvoltage	Measuring range for undervoltage
CM-PVS.31	3 x 220-300 V AC	3 x 160-230 V AC
CM-PVS.41	3 x 420-500 V AC	3 x 300-380 V AC
CM-PVS.81	3 x 300-400 V AC	3 x 210-300 V AC

Tripping delay T_v

The tripping delay T_v can be adjusted within a range of 0.1 to 30 s by means of a potentiometer with logarithmic scale. By turning to the left stop, the tripping delay can be switched off.

Rotary switch

Type of tripping delay and phase sequence monitoring

The type of tripping delay and phase sequence monitoring can be selected via the rotary switch "Function".

ON-delay with phase sequence monitoring
The output relays de-energize as soon as a phase sequence error occurs. The output relays re-energize automatically as soon as
the phase sequence is correct again.
OFF-delay with phase sequence monitoring
The output relays de-energize as soon as a phase sequence error occurs. The output relays re-energize automatically as soon as
the phase sequence is correct again.
ON-delay without phase sequence monitoring
Phase sequence errors will not cause a tripping of the relay.
OFF-delay without phase sequence monitoring
Phase sequence errors will not cause a tripping of the relay.

Indication of operational states

LEDs, status information and fault messages

Operational state	R/T: LED yellow	F1: LED red	F2: LED red
Control supply voltage applied, output relay energized	,	-	-
Tripping delay T _v active	ПП	-	-
Phase failure	-	<u>Г</u>	ПП
Phase sequence	-	лл∟а	Iternating
Overvoltage	-	Г <u></u>	-
Undervoltage	-	-	ГП
Adjustment error 1)	ПП	ПП	ПП

¹⁾ Overlapping of the threshold values: The threshold value for overvoltage is set to a smaller value than the threshold value for undervoltage.

Function descriptions / diagrams

Configuration of the devices is made by means of operating controls accessible on the front of the unit and signalling is made by means of front-face LEDs.

Phase sequence and phase failure monitoring


Applying control supply voltage begins the fixed start-up delay T_s . When T_s is complete and all phases are present with correct voltage, the output relays energize and the yellow LED R/T is on.

Phase sequence monitoring:

The output relays de-energize as soon as a phase sequence error occurs. The fault is displayed by alternated flashing of the LEDs F1 and F2. The output relays re-energize automatically as soon as the phase sequence is correct again.

Phase failure monitoring:

The output relays de-energize instantaneously if a phase failure occurs. The fault is indicated by lightning of LED F1 and flashing of LED F2. The output relays re-energize automatically as soon as the voltage returns to the tolerance range.

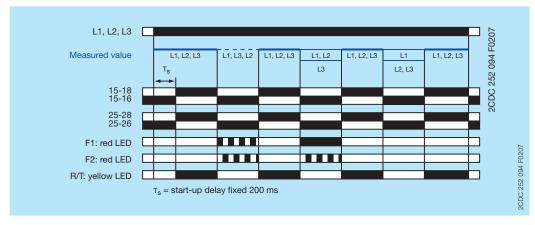


Over- and undervoltage monitoring

Applying control supply voltage begins the fixed start-up delay T_s . When T_s is complete and all phases are present with correct voltage and with correct phase sequence, the output relays energize and the yellow LED R/T is on.

Type of tripping delay = ON-delay ⊠

If the voltage to be monitored exceeds or falls below the set threshold value, the output relays de-energize after the set tripping delay T_v is complete. The LED R/T flashes during timing and turns off as soon as the output relays de-energize.


The output relays re-energize automatically as soon as the voltage returns to the tolerance range, taking into account a fixed hysteresis of 5 %. The LED R/T is on.

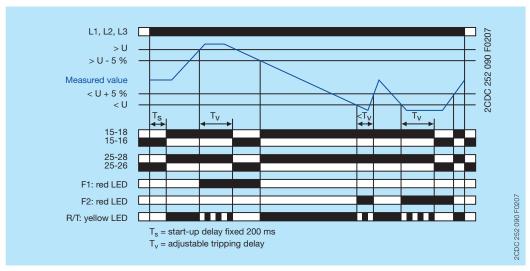


Type of tripping delay = OFF-delay

If the voltage to be monitored exceeds or falls below the set threshold value, the output relays de-energize instantaneously and the LED R/T turns off.

As soon as the voltage returns to the tolerance range, taking into account a fixed hysteresis of 5 %, the output relays reenergize automatically after the set tripping delay T_v is complete. The LED R/T flashes during timing and turns steady when timing is complete.

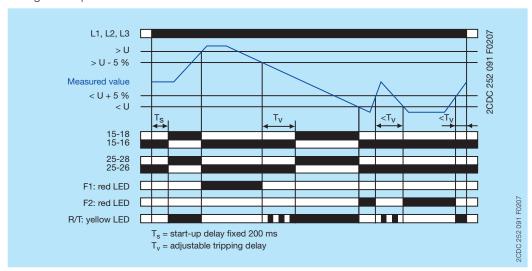

Electrical connection

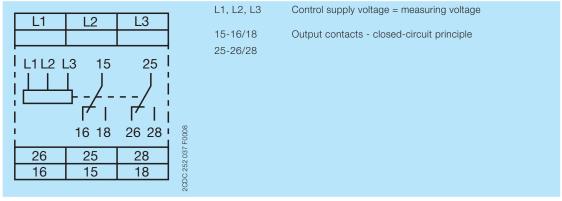

Connection diagram CM-PVS.x1

Technical data

Data at $\rm T_a$ = 25 $^{\circ}\rm C$ and rated values, unless otherwise indicated

Input circuit

Туре		CM-PVS.31	CM-PVS.41	CM-PVS.81
Supply circuit = measuring circuit			L1, L2, L3,	•
Rated control supply voltage U_s = measuring voltage		3 x 160-300 V AC	3 x 300-500 V AC	3 x 200-400 V AC
Rated control supply voltage U _s	tolerance	-15+10 %		
Rated frequency		50/60 Hz		
Frequency range		45-65 Hz		
Typical current / power consum	ption	25 mA / 10 VA (230 V AC)	25 mA / 18 VA (400 V AC)	19 mA / 10 VA (300 V AC)
Measuring circuit			L1, L2, L3	
Monitoring functions	Phase failure	•	•	•
	Phase sequence	can be switched off	can be switched off	can be switched off
	Over-/undervoltage	•	•	•
Measuring range	Overvoltage	3 x 220-300 V AC	3 x 420-500 V AC	3 x 300-400 V AC
	Undervoltage	3 x 160-230 V AC	3 x 300-380 V AC	3 x 210-300 V AC
Thresholds	Overvoltage	adjustable within the measuring range		
	Undervoltage	adjustable within the measuring range		
Hysteresis related to Over-/undervoltage the threshold value		fixed 5 %		
Rated frequency of the measuri	ng signal	50/60 Hz		
Frequency range of the measur	ing signal	45-65 Hz		
Maximum measuring cycle time		100 ms		
Accuracy within the rated contr	ol supply voltage tolerance	ΔU ≤ 0.5 %		
Accuracy within the temperature ra	inge	ΔU ≤ 0.06 % / °C		
Measuring method		True RMS		
Timing circuit				
Start-up delay T _s		fixed 200 ms		
Tripping delay T _v		ON- or OFF-delay		
		0 s; 0.1-30 s adjustal	ble	
Repeat accuracy (constant parameters)		< ±0.2 %		
Accuracy within the rated contr	ol supply voltage tolerance	$\Delta t \le 0.5 \%$		
Accuracy within the temperature ra	inge	$\Delta t \leq 0.06 \% / °C$		

User interface

Indication of operational states	
Relay status / timing R/T	yellow LED
Fault message F1	red LED
Fault message F2	red LED

Details see table ,LEDs, status information and fault messages' on page 5 and ,Function descriptions / diagrams' on page 5.

Output circuits

· ·		
Kind of output	15-16/18	relay, 1st c/o (SPDT) contact
	25-26/28	relay, 2nd c/o (SPDT) contact
		1 x 2 (SPDT) contacts
Operating principle		closed-circuit principle 1)
Contact material		AgNi alloy, Cd free
Rated operational voltage	e U _e (IEC/EN 60947-1)	250 V
Minimum switching volta	ge / Minimum switching current	24 V / 10 mA
Maximum switching volta	ge / Maximum switching current	see load limit curves
Rated operational curren	t I _e AC12 (resistive) at 230 V	4 A
(IEC/EN 60947-5-1)	AC15 (inductive) at 230 V	3 A
	DC12 (resistive) at 24 V	4 A
	DC13 (inductive) at 24 V	2 A
AC rating (UL 508)	Utilization category	B 300
	(Control Circuit Rating Code)	D 300
	max. rated operational voltage	300 V AC
	max. continuous thermal current at B 300	5 A
	max. making/breaking apparent power	3600/360 VA
	at B 300	3000/300 VA
Mechanical lifetime		30 x 10 ⁶ switching cycles
Electrical lifetime	AC12, 230 V, 4 A	0.1 x 10 ⁶ switching cycles
Maximum fuse rating to a	achieve n/c contact	6 A fast-acting
short-circuit protection	n/o contact	10 A fast-acting

General data

MTBF		on request			
Duty time		100 %			
Dimensions (W x H x D)	pı	oduct dimensions	22.5 x 85.6 x 103.7 m	nm (0.89 x 3.37 x 4.08 in)	
	pack	aging dimensions	97 x 109 x 30 mm (3.	82 x 4.29 x 1.18 in)	
Weight			Screw connection technology		Easy Connect Technology (push-in)
	net weight	CM-PVS.31	0.141 kg (0.311 lb)	•••••	0.132 kg (0.291 lb)
		CM-PVS.41	0.139 kg (0.306 lb)	•	0.131 kg (0.289 lb)
		CM-PVS.81	0.136 kg (0.299 lb)		0.128 kg (0.282 lb)
	gross weight	CM-PVS.31	0.166 kg (0.366 lb)		0.157 kg (0.346 lb)
		CM-PVS.41	0.164 kg (0.362 lb)		0.156 kg (0.343 lb)
		CM-PVS.81	0.161 kg (0.355 lb)		0.153 kg (0.337 lb)
Mounting		•	DIN rail (IEC/EN 60715), snap-on mounting without any tool		
Mounting position		•	any	•••••	••••
			CM-PVS.31	CM-PVS.41	CM-PVS.81
Minimum distance to other units horizontal		10 mm (0.39 in) in cas	se of continuous voltage of	not necessary	
			> 220 V	> 400 V	
Material of housing		UL 94 V-0			
Degree of protection housing terminals		IP50			
		IP20			

¹⁾ Closed-circuit principle: Output relay(s) de-energize(s) if measured value exceeds or falls below the adjusted threshold value.

Electrical connection

		Screw connection technology	Easy Connect Technology (push-in)
Wire size	fine-strand with(out)	1 x 0.5-2.5 mm ²	2 x 0.5-1.5 mm ²
	wire end ferrule	(1 x 20-14 AWG)	(2 x 20-16 AWG)
		2 x 0.5-1.5 mm ²	
		(2 x 20-16 AWG)	
	rigid	1 x 0.5-4 mm ²	2 x 0.5-1.5 mm ²
		(1 x 20-12 AWG)	(2 x 20-16 AWG)
		2 x 0.5-2.5 mm ²	
		(2 x 20-14 AWG)	
Stripping length		8 mm (0.32 in)	
Tightening torque		0.6 - 0.8 Nm	-
		(5.31 - 7.08 lb.in)	

Environmental data

Ambient temperature ranges	operation	-25+60 °C
	storage	-40+85 °C
Damp heat, cyclic (IEC/EN 60068-2-30)		55 °C, 6 cycles
Climatic category		3K3
Vibration, sinusoidal (IEC/EN 60255-21-1)		Class 2
Shock (IEC/EN 60255-21-2)		Class 2

Isolation data

Туре		
Rated insulation	input circuit / output circuit	600 V
voltage U _i	output circuit 1 / output circuit 2	300 V
Rated impulse withstand voltage	U _{imp} input circuit	6 kV, 1.2/50 μs
(IEC/EN 60664)	•	4 kV, 1.2/50 μs
Test voltage between all isolated circuits (routine test)		2.5 kV, 50 Hz, 1 s
Basic insulation	input circuit / output circuit	
Protective separation	input circuit /	
(IEC/EN 61140, EN 50178)	output circuit	-
Pollution degree (IEC/EN 60664, IEC/EN 60255-5)		3
Overvoltage category (IEC/EN 60664, IEC/EN 60255-5)		III

Standards


Product standard	IEC/EN 60255-6, EN 50178
Low Voltage Directive	2006/95/EC
EMC directive	2004/108/EC
RoHS directive	2002/95/EC


Electromagnetic compatibility

Туре		
Interference immunity to		IEC/EN 61000-6-1, IEC/EN 61000-6-2
electrostatic discharge	IEC/EN 61000-4-2	Level 3 (6 kV / 8 kV)
radiated, radio-frequency, electromagnetic field	IEC/EN 61000-4-3	Level 3 (10 V/m)
electrical fast transient / burst	IEC/EN 61000-4-4	Level 3 (2 kV / 2 kHz)
surge	IEC/EN 61000-4-5	Level 4 (2 kV L-L)
conducted disturbances, induced by radio-frequency fields	IEC/EN 61000-4-6	Level 3 (10 V)
harmonics and interharmonics	IEC/EN 61000-4-13	Class 3
Interference emission		IEC/EN 61000-6-3, IEC/EN 61000-6-4
high-frequency radiated	IEC/CISPR 22, EN 55022	Class B
high-frequency conducted	IEC/CISPR 22, EN 55022	Class B


Technical diagrams

Load limit curves

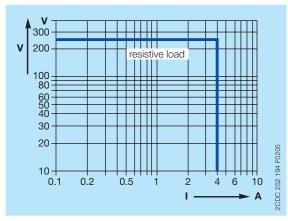


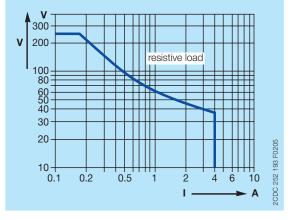

AC load (resistive)

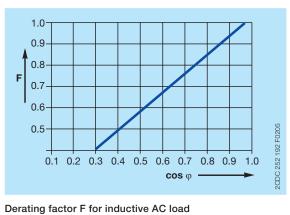


DC load (resistive)

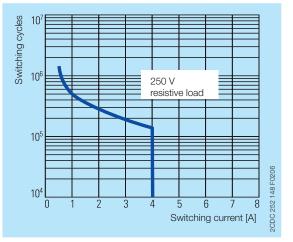

Contact lifetime


Dimensions

in **mm** and *inches*

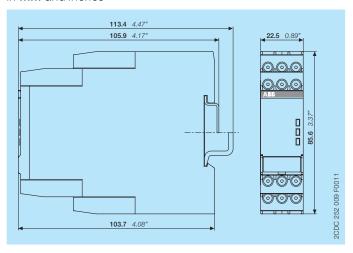


Accessories


in **mm** and *inches*

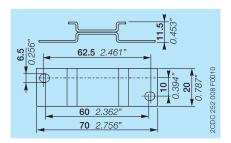

ADP.01 - Adapter for screw mounting

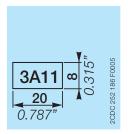

MAR.01 - Marker label for devices without DIP switches

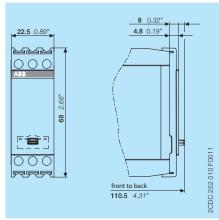

COV.11 - Sealable transparent cover

Further documentation

Document title	Document type	Document number
Electronic products and relays	Technical catalogue	2CDC 110 004 C020x
CM-PAS, CM-PFS, CM-PSS, CM-PVS	Instruction manual	1SVC 730 510 M0000

You can find the documentation on the internet at www.abb.com/lowvoltage -> Control Products -> Electronic Relays and Controls -> Three Phase Monitors.

Document number 2CDC 112 188 D0201 (07.2012)

Contact us

ABB STOTZ-KONTAKT GmbH

P. O. Box 10 16 80

69006 Heidelberg, Germany Phone: +49 (0) 6221 7 01-0 Fax: +49 (0) 6221 7 01-13 25 E-mail: info.desto@de.abb.com

You can find the address of your local sales organisation on the ABB home page http://www.abb.com/contacts -> Low Voltage Products and Systems

Note:

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB AG does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB AG.

Copyright© 2012 ABB All rights reserved